



RAPID-SENSE

Extinguishing Panel

**INSTALLATION, COMMISSIONING
& OPERATING MANUAL FOR
EXTINGUISHING CONTROL PANEL**

CFX-Plus Rapid Sense

Fire Alarm Panels



RAPID-SENSE

Extinguishing Panel





Table of Contents	Page
1 INTRODUCTION	3
1.1 STANDARDS	3
1.2 CAUTIONS AND WARNINGS	3
1.3 DESCRIPTION	3
2 OPERATION	4
2.1 INTRODUCTION	4
2.1.1 Access Levels	4
2.1.2 Front Panel Controls and Indications	4
2.1.2.1 Display	4
2.1.2.2 LED Indications	5
2.1.2.3 Manual Release Button	6
2.1.2.4 Control Buttons	6
2.1.2.5 Menu and Navigation Buttons	7
2.1.2.6 Key-Switches	7
2.1.2.7 Buzzer	7
2.1.3 Enable Controls	8
2.1.4 Navigating through menus	8
2.1.5 Numeric data entry	8
2.2 OPERATING CONDITIONS	9
2.2.1 Fire Alarm Condition	9
2.2.2 Release / Activated Condition	9
2.2.3 Hold Condition	11
2.2.4 Abort Condition	11
2.2.5 Fault Condition	11
2.2.6 Warning Condition	12
2.3 LEVEL 1 MENU FUNCTIONS	12
2.3.1 Enable Controls	12
2.3.2 View	12
2.3.3 LED Test	12
2.4 LEVEL 2 MENU FUNCTIONS	13
2.4.1 View	13
2.4.1.1 Faults	13
2.4.1.2 Disables	13
2.4.1.3 Warnings	14
2.4.1.4 Log	14
2.4.1.5 Software Versions	15
2.4.1.6 Panel Levels	15
2.4.2 Test	15
2.4.2.1 Zones	16
2.4.2.2 Display	16
2.4.2.3 Buzzer	16
2.4.2.4 Manual Triggers	17
2.4.3 Extinguishant Modes	17
2.4.3.1 Mode	17
2.4.3.2 Extract	17
2.4.4 Disable / Enable	18
2.4.5 Date/Time	18



1 Introduction

1.1 Standards

The Rapid-Sense Gas Extinguishing Control Panel conforms to the following standards:

BS EN12094-1: 2003 Extinguishing Control Device

BS EN54-2: 1998 Control and Indicating Equipment

BS EN54-4: 1998 Power Supply Equipment

BS EN60950: 2000 Safety of information technology equipment

BS EN50130-4: 1996 Product Family Standard

Electromagnetic Compatibility Directive 89/336/EEC (and the amending directive 92/23/EEC)

Low Voltage Directive 73/23/EEC

1.2 Cautions and Warnings



Only Trained service personnel should undertake the Installation, Programming and Maintenance of this equipment.

1.3 Description

This manual covers the use and how to operate the Rapid-Sense Extinguishing Control Panels. Refer to the Installation Manual (Document No. TI-680-147) for details of installation, programming and commissioning of the panel.

The Rapid-Sense is a Single Flooding Zone Control Panel with up to three detection zone circuits.

The detection zones are compatible with conventional detectors and call points.

2 Operation

2.1 Introduction

These instructions cover the operation and use of the panels.

2.1.1 Access Levels


The panel operation is protected from inadvertent and erroneous misuse by means of four access levels. These levels are as follows:

- Level 1 Untrained user
- Level 2 Authorised User
- Level 3 Commissioning, Service and Maintenance
- Level 4 Commissioning, Service and Maintenance – Special Tools Required

This document covers the Level 1 and Level 2 User functions. For details on the installation, programming and commissioning of the panel, refer to Manual 680-147. Full details are supplied with any special tools.

- A Level 1 Untrained User can view the current operational condition of the system and may MUTE the internal buzzer.
- A Level 2 Authorised User can view the operational condition of the system and may MUTE the internal buzzer. In addition, the RESOUND/SOUND ALARMS, SILENCE and RESET buttons are enabled and access to the Level 2 Menu functions is available. This requires a password (or key-switch).
- NOTES: There are up to 4 User ID codes available, each with its own password. The panel can be configured to automatically cancel access to Level 2 functions after a specified period.

2.1.2 Front Panel Controls and Indications

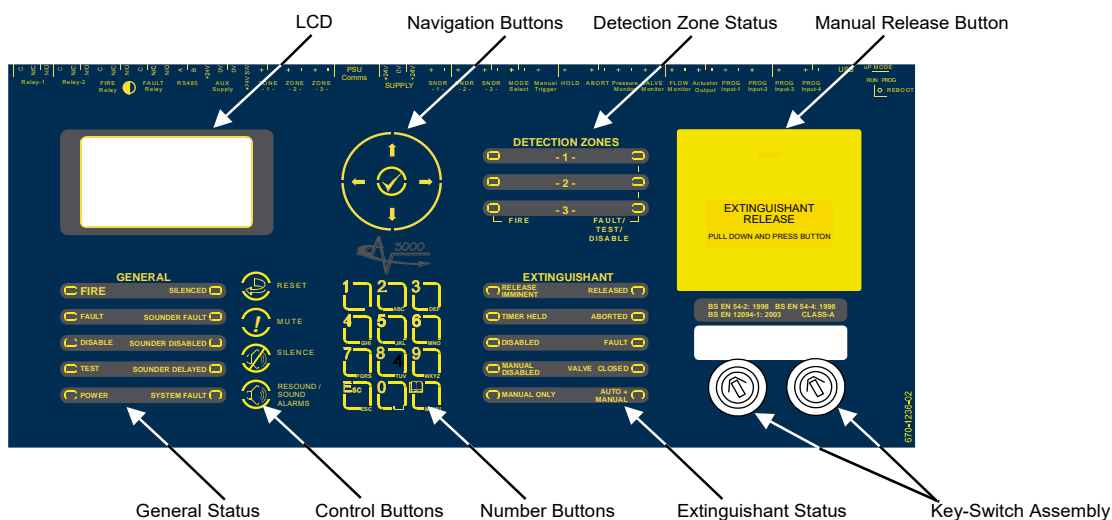


2.1.2.1 Display

The LCD along with the LED Indicators shows the operating status of the system. Examples of the information presented is shown below:




ABOUT THIS PANEL


Normal Display

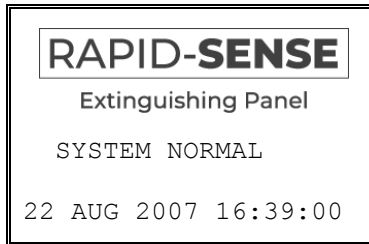


Non-normal Display

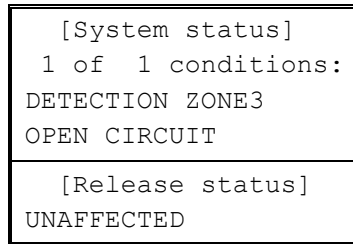

Typical Menu Display

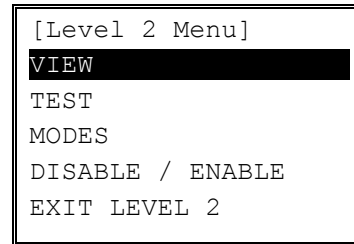


Release Imminent

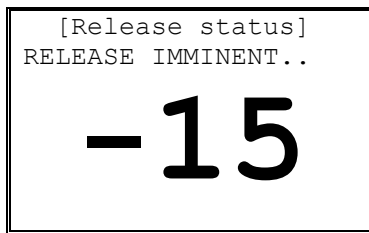


The display shows a countdown timer with the amount of time remaining before the extinguishant is released.

Release Activated

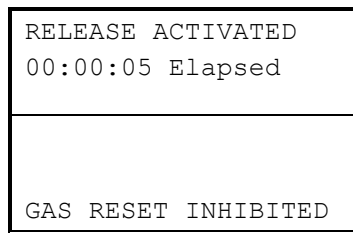

The display shows the time elapsed since the extinguishant release commenced.

Release Complete

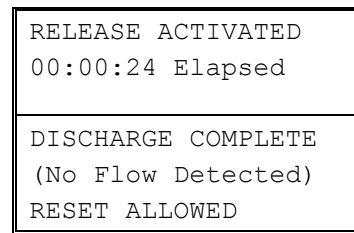

2.1.2.2 LED Indications

The LED Status Indications show the basic operational state of the panel and whether the panel is in a fire alarm, fault, disabled or test condition.

2.1.2.2.1 GENERAL STATUS

Function	Colour	Description
FIRE	Red	Indicates that the system has detected a fire alarm condition
FAULT	Yellow	Indicates that the system has detected a fault condition
DISABLE	Yellow	Indicates that part of the system has been disabled (i.e. isolated)
TEST	Yellow	Indicates that part of the system is in a test condition
POWER	Green	Indicates the presence of power
SILENCED	Yellow	Indicates that the general fire alarm sounders have been silenced
SOUNDER FAULT	Yellow	Indicates the presence of a fault in either or both of the general fire alarm sounder wiring circuits
SOUNDER DISABLED	Yellow	Indicates that either or both of the general fire alarm sounder circuits have been disabled (i.e. isolated)
DELAYED	Yellow	Not used
SYSTEM FAULT	Yellow	Indicates the presence of a system fault

2.1.2.2.2 DETECTION ZONE STATUS

Function	Colour	Description
FIRE	Red	Indicates that the system has detected a fire alarm condition in the respective zone
FAULT/TEST/DISABLE	Yellow	Indicates that the system has (flashing indication) detected a fault condition in the respective zone or (steady indication) that the zone is either in a test state or in a disabled state

ABOUT THIS PANEL




2.1.2.2.3 EXTINGUISHANT

Function	Colour	Description
RELEASE IMMINENT	Red	Indicates (flashing) that the release of extinguishant is imminent. The indication will turn to steady when the signal to release the extinguishant has been activated.
RELEASED	Red	Indicates that the release of extinguishant has occurred and the panel has detected the flow of the extinguishant released.
TIMER HELD	Yellow	Indicates that the imminent release of extinguishant is temporarily suspended.
ABORTED	Yellow	Indicates that the imminent release of the extinguishant has been aborted.
DISABLED	Yellow	Indicates that the extinguishant release control signal has been disabled. The release of extinguishant is prevented even if a fire alarm or manual release are present.
FAULT	Yellow	Indicates that the system has detected a fault condition within part of the extinguishing control device (ECD) circuits. The General Fault LED will also be illuminated.
MANUAL DISABLED	Yellow	Indicates that one or more buttons for manual release have been disabled.
VALVE CLOSED	Yellow	Indicates that the extinguishant is blocked by a manual shut-off valve and that there may be no extinguishant available to suppress a fire – Ensure immediate remedial action is taken to address the problem.
MANUAL ONLY	Yellow	Indicates that the extinguishant can only be released by means of a manual release button.
AUTO + MANUAL	Yellow	Indicates that the extinguishant can be released by both the automatic detection of a fire alarm and by means of a manual release button.

2.1.2.3 Manual Release Button

To manually release the extinguishant, pull down the flap and press the button marked with the circle.

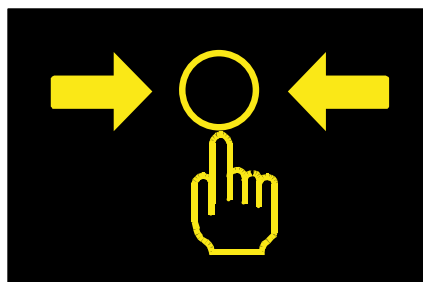

2.1.2.4 Control Buttons

	Reset Press to reset the panel from a fire alarm condition and/ or a gas release sequence.	Only available with Level 2 Access.
	Mute Press to mute the internal buzzer.	Available in both Level 1 and Level 2
	Silence ¹ Press to silence the sounders.	Only available with Level 2 Access.
	Resound / Sound Alarms Press again to re-activate the sounders. Press to initiate a manual evacuation and sound the alarms.	Only available with Level 2 Access.

¹ SILENCE will silence all sounders except for the flooding zone (protected area) sounders when the system is in the activated state. Once the extinguishant has been released, it is possible to silence the flooding zone sounders.

2.1.2.5 Menu and Navigation Buttons

		Press to scroll through Menu Options. Press to display more information.
		Press to scroll through menu Options. Press to scroll through lists of zones or devices.
		Press to confirm entry of numeric information entry. Press to confirm selection of a menu option.
		Press to change some of the configuration options.
		Used to enter numbers.
		Press to exit the menu functions and return to the normal display.
		Press to show or return to Menu Functions.

2.1.2.6 Key-Switches



One or two key-switches can be fitted to the panel.

The functions of these are programmable and the installer will have inserted a label to indicate their use.

Typical uses are:

AUTO + MANUAL / MANUAL ONLY Selection

LEVEL 1 / LEVEL 2 ACCESS Selection

Depending on the key-switch mechanism fitted, the key may be removable in only one position or removable in both operating positions.

2.1.2.7 Buzzer


The buzzer produces two different sounds to differentiate between fire alarm conditions and fault / warning conditions.

Condition	Operation
Fire Alarm	The buzzer operates with a continuous tone.
Fault	The buzzer operates intermittently.

2.1.3 Enable Controls

Controls are normally disabled. If a level 2 Access key-switch is fitted use this in preference to passwords.

To enable the control keys or gain access to the Level 2, press the Menu button. The display shows the following:

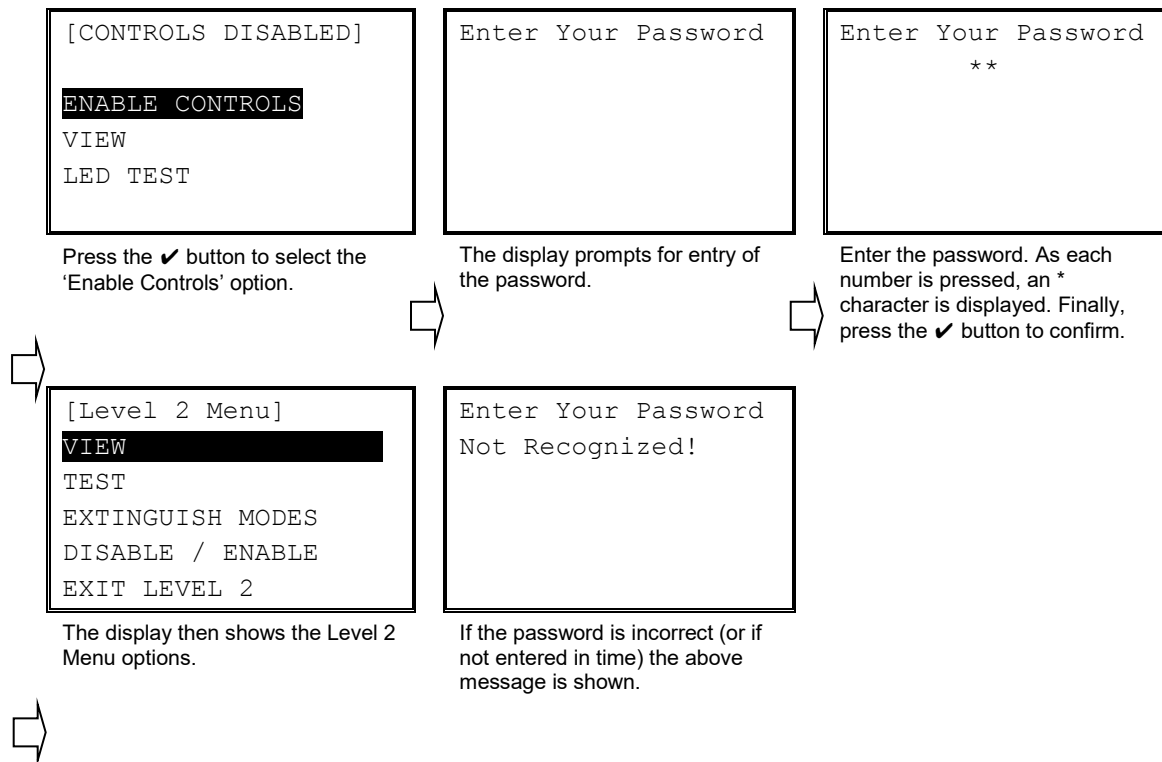

If a control button is pressed at Level 1, the display prompts for password entry. To continue, enter the password. If the password is valid, the relevant control function will be activated and the display will remain at Level 1.

2.1.4 Navigating through menus

When a menu is displayed, use the **↓↑** buttons to highlight the required menu option and then press the **✓** button to select it.

Press the **ESC** button from within a menu option to return to the previous menu.

The display will revert to the status mode display after 60 seconds on no activity (15 seconds in a fire alarm condition). Press the Menu button again to return to the menu option.

A programmable timer can be configured to automatically cancel Level 2 access. This time can be between 1 and 5 minutes. If no buttons are pressed for the timeout period, then Level 2 access will be cancelled. It will be necessary to re-enter the password to regain access to control and Level 2 Menu functions.

2.1.5 Numeric data entry

Numbers are entered by moving to the required field, and then typing in the required number, followed by the **✓** button. The display returns to the previous menu.

If the number is entered incorrectly, press the **←** button to clear the entry and then re-enter the required number. Alternatively, press the **ESC** button to cancel the number entry and return to the previous menu.



2.2 Operating Conditions

2.2.1 Fire Alarm Condition

[Fire Detected]
FIRE STARTED: ZONE 1
TOTAL FIRES: 1
[Release Status]
STAGE-1

The display shows location / origin of the fire alarm and the total number of zones in a fire alarm condition.

If two or more zones enter the fire alarm condition, the display also shows the location of the last zone to enter a fire alarm condition.

In addition, the General Fire LED and the respective Zone Fire LED will be illuminated.

[Fire Detected]
FIRE STARTED: ZONE 1
LAST FIRE : ZONE 3
TOTAL FIRES : 2
[Release Status]
STAGE-1

The status of the extinguishant release is also indicated. If a fire alarm occurs in a zone that has no effect on the extinguishant control then the display shows UNAFFECTED.

The fire alarm bells / sounders will activate (depending on how they are programmed to respond).

To silence the internal buzzer, press the MUTE button.

To silence the bells, press the SILENCE button (the SILENCED LED will illuminate)².

To reset the panel, press the RESET button. If a 'Reset Control' menu is presented, use the $\uparrow\downarrow$ buttons to highlight the 'RESET FIRE & GAS' option, then press the \checkmark button to select.

[RESET Control]
RESET FIRE & GAS
RESET GAS ONLY
CANCEL RESET

The Reset Control menu may be presented when the reset control key is pressed (this is dependent on how the control panel has been configured by the installer).

Use the $\uparrow\downarrow$ buttons to highlight the required option, then use the \checkmark button to select the highlighted option.

NOTE: If the programming of the panel is such that the release condition is immediately invoked on detection of a single fire alarm, then the display will immediately show the release status information.

2.2.2 Release / Activated Condition

The activated condition is established when one or more fire alarms have occurred or when the manual release button is pressed.

The number of zones, and which zones, that must be in a fire alarm condition before the activated condition is invoked depends on the installation programming of the panel.

[Release status]
RELEASE IMMINENT..
-15

When the activated condition is established, the display indicates that the release is imminent and also shows a countdown timer with the number of seconds remaining before the extinguishant is released.

In addition, the Release Imminent LED flashes.

If programmed, the bells / sounders will ring with pulsed alert tone.

² SILENCE will silence all sounders except for the flooding zone (protected area) sounders when the system is in the activated state. Once the extinguishant has been released, it is possible to silence the flooding zone sounders by pressing the silence button again.

ABOUT THIS PANEL



RELEASE ACTIVATED 00:00:05 Elapsed
GAS RESET INHIBITED

When the countdown timer has elapsed, the actuating output is activated to start the release of the extinguishant.

The display now shows the time elapsed since the release of extinguishant commenced.

In addition, the Release Imminent LED turns ON steady.

RELEASE ACTIVATED 10 Seconds Elapsed
DISCHARGE COMPLETE (No Flow Detected)
GAS RESET INHIBITED

When the discharge is complete (either time elapsed or flow detected) the display indicates the discharge is complete.

It is now possible to silence the flooding zone sounders.

RELEASE ACTIVATED 10 Seconds Elapsed
RELEASE CONFIRMED DISCHARGE COMPLETE GAS RESET INHIBITED

If confirmed by the detection of the flow of the extinguishant, the display shows RELEASE CONFIRMED (Released Condition) and the RELEASED LED turns ON steady.

If previously silenced, the internal buzzer will re-sound. Press the MUTE button to silence the buzzer.


RELEASE ACTIVATED 20 Seconds Elapsed
DISCHARGE COMPLETE EXTRACT RUNNING RESET ALLOWED

When the extinguishant has been fully released (and if programmed), the panel will either automatically, or will prompt for manual confirmation, activate the output to control the extract fan.

This is indicated on the display as EXTRACT RUNNING or PRESS ✓ to EXTRACT).

When the discharge is complete, the display prompts that the panel can be reset.

To reset the panel, press the RESET button. A Reset Control menu may appear – use the ↑↓ buttons to highlight the appropriate option, then press the ✓ button to select.

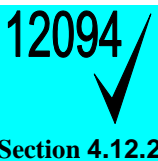

Reset of the Activated Condition / Release Signal.

NOTE: In accordance with EN 12094-1, the ECD shall not permit a reset until either the RELEASED condition has been established (flow detected) or until after a programmable time following activation of the mechanism to release the extinguishant.

NOTE: Depending on programming, the EXTRACT condition may persist after the panel is reset for up to 120 minutes. This will be indicated on the normal status display (Extract Running).



Released Condition.

NOTE: In accordance with EN 12094-1, the activated / release condition may be established without the detection of a fire alarm or manual release. If the panel detects the release of extinguishant, it will immediately indicate the released condition.



ABOUT THIS PANEL

2.2.3 Hold Condition

COUNTDOWN ON HOLD
(Remove HOLD resume)

-15

If any hold button is activated, the imminent release countdown is held for as long as the button is pressed.

The display shows the HOLD condition and the TIMER HELD LED is illuminated.

When the hold button is released, the panel will resume the imminent release countdown either from the time remaining or from the maximum time programmed.

2.2.4 Abort Condition

RELEASE ABORTED!

PRESS RESET TO REARM

If an abort button is activated, the imminent release countdown is aborted.

The display prompts for the panel to be reset and the ABORTED LED is illuminated.

Ensure that the abort button is de-activated and then press the RESET button. A Reset Control menu may appear – use the $\uparrow\downarrow$ buttons to highlight the appropriate option, then press the \checkmark button to select.

2.2.5 Fault Condition

[System status]
1 of 1 conditions:
DETECTION ZONE3
OPEN CIRCUIT

[Release status]
UNAFFECTED

If the panel detects a fault condition, the display will indicate the number and nature of the faults. The internal buzzer will sound with an intermittent tone and the GENERAL FAULT LED and any other specific FAULT LED indications will be illuminated.

Press the $\uparrow\downarrow$ buttons to scroll through the list of faults.

Press the MUTE button to silence the internal buzzer.

NOTE: The fault condition is non-latching (except System Fault) and the indications will automatically be cleared when the fault is remedied. Press the RESET key to clear a System Fault - a Reset Control menu may appear – use the $\uparrow\downarrow$ buttons to highlight the 'RESET GAS & FIRE' option, then press the \checkmark button to select.

NOTE: If silenced, the buzzer will re-sound when a new fault occurs.

[System status]
1 of 1 conditions:
DETECTION ZONE3
OPEN CIRCUIT

For service call:
01234 567 890


When the MUTE button is pressed, the bottom two lines of the display will show the telephone number to call for service (if programmed) for four seconds.



2.2.6 Warning Condition

[System status] 1 of 1 conditions: PRESSURE MONITOR OPEN CIRCUIT
[Release status] UNAFFECTED

If the panel detects an extinguishant warning condition, the display will indicate the number and nature of the warnings. The internal buzzer will sound with an intermittent tone and the GENERAL FAULT LED and any other specific FAULT LED indications will be illuminated.

Press the   buttons to scroll through the list of faults.

Press the MUTE button to silence the internal buzzer.

2.3 Level 1 Menu Functions

2.3.1 Enable Controls

Controls and User Level-2 Menu functions are normally disabled. Refer to Section 2.1.3 for further details.

2.3.2 View

On selection, the current status of any Faults, Disablements and Warnings along with the history Log can be shown. These are the same as the Level-2 View function. Refer to Section 2.4.1 for further details.

2.3.3 LED Test

On selection, the front panel LED Indicators will be illuminated for a short period of time.



2.4 Level 2 Menu Functions

The following table gives a list of the Level 2 Menu Functions and a brief description for each function.

Menu Option	Sub Menu / Item	Comments / Description
VIEW	FAULTS	View any current fault conditions recorded.
	DISABLES	View any current disablement conditions.
	WARNINGS	View any current extinguishant warnings conditions.
	LOG	View the history log.
	SW VERSIONS	View the software version installed in the extinguishant control panel and in remote status indicator panels.
	PANEL	View real-time power supply related information.
TEST	ZONES	Test the Detection Zone inputs with/without sounders.
	DISPLAY	Test the Display, LED Indicators and Buttons.
	BUZZER	Test the Buzzer
EXTINGUISH MODES	MANUAL	Select Manual Only mode / Auto + Manual mode
	EXTRACT	Turn on the extract output (if configured)
DISABLE / ENABLE	--	Disable Zone, Sounder, Input and Output circuits and disable functions. Enable any current disablement conditions
EXIT LEVEL 2	--	Cancels access to Level 2 menu functions and control key functions.
DATE / TIME	--	Allows entry of the current date and time.
COMMISSION	--	Engineer use only – requires separate password.

2.4.1 View

[View Menu]
FAULTS
DISABLES
WARNINGS
LOG
SW VERSIONS

Press the **↑↓** buttons to scroll through the list and press the **✓** button to select the required view option.

[Fault Status]
Nothing to Report

If there are no conditions present, the display will show “Nothing to Report”.

2.4.1.1 Faults

[Fault Status]
1 of 3
DETECTION ZONE 1
>SHORT CIRCUIT
DETECTION ZONE 2
>OPEN CIRCUIT

If there are fault conditions present, the display will show the number of conditions and a list of the fault conditions.

Press the **↑↓** buttons to scroll through the list of faults.

Press the **ESC** button to return to the previous menu.

2.4.1.2 Disables

[Disable List]
Zone 1 DISABLED
Man Release DISABLED

If there are disablement conditions present, the display will show the number of conditions and a list of the disablements.

Press the **↑↓** buttons to scroll through the list of disablements.

Press the **ESC** button to return to the previous menu.

2.4.1.3 Warnings

```
[Warning Status]
1 of 2
VALVE MONITOR INPUT
>VALVE CLOSED
PRESSURE MONITOR
>LOW PRESSURE
```

If there are warning conditions in the extinguishant system present, the display will show the number of conditions and a list of the warning conditions.

Press the **↑↓** buttons to scroll through the list of warnings.

Press the **ESC** button to return to the previous menu.

2.4.1.4 Log

The panel contains a history log of fires, faults and other conditions. This can be filtered to show only the fire alarm and trigger events that could result in the release of the extinguishant. In addition, a total fire alarm count is also available.

```
[Event Log Menu]
ALL EVENTS
FIRES & TRIGGERS
ALARM COUNT
```

On selection, a menu is presented to select the required view.

Press the **↑↓** buttons to scroll through the list and press the **✓** button to select the required view option.

Press the **ESC** button to return to the previous menu.

2.4.1.4.1 View Events

Select either the ALL EVENTS or the FIRES + TRIGGERS option. On selection, the latest recorded entry is shown. For example:

```
[Event Log Viewer]
EVENT: 55/55
20/09/2007 10:21:15
CONTROL PANEL
DETECTION ZONE 3
>OPEN CIRCUIT
```

The upper two lines show the menu option and the number of the entry currently being viewed.

Press the **↑↓** buttons to scroll through the list of entries.

Press the **ESC** button to return to the previous menu.

The next four lines show the details of the log entry.

```
[Event Log Viewer]
EVENT: 41/58
20/09/2007 09:22:18
USER4
DETECTION ZONE 3
>DISABLE
```

Line 1 – shows the date and time the entry was recorded

Line 2 – shows the origin

Line 3 – shows the circuit / function affected

Line 4 – shows specific details

```
[Event Log Viewer]
EVENT: 11/58
19/09/2007 12:25:11
CONTROL PANEL
DETECTION ZONE 3
>FIRE ALARM
```

Line 1 – shows the date and time the entry was recorded

Line 2 – shows the origin

Line 3 – shows the circuit / function affected

Line 4 – shows specific details




ABOUT THIS PANEL

In the above examples:


- [1] The control panel recognised and recorded an open-circuit fault condition on the wiring of Detection Zone 3.
- [2] User 4 disabled the operation of, and fault reporting from, Detection Zone 3.
- [3] The control panel recognised and recorded a fire alarm condition on Detection Zone 3.

2.4.1.4.2 Alarm Counter

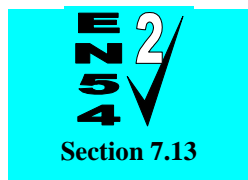

Alarm Counter.

The Panel records the number of times that the fire alarm condition has occurred at the panel.

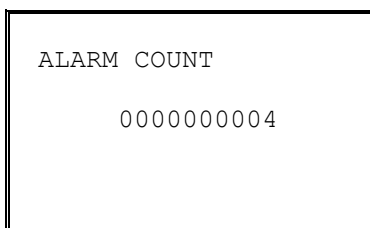


On selection, the display shows the alarm count.

In the example the panel has entered the fire alarm condition 4 times since it was installed.

Press the **ESC** button to return to the previous menu.

The panel increments the count by one each time it changes from the normal condition to indicate a fire alarm condition. Whilst in the fire alarm condition, and until it is reset, further fire alarm events do not increment the counter.

2.4.1.5 Software Versions

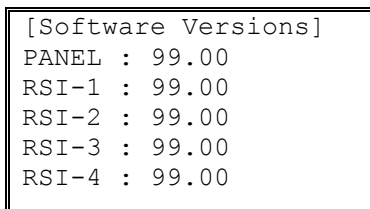


On selection, the display shows a list containing the panel and any configured remote status indicators along with the version of software installed in each device.

Press the **↑↓** buttons to scroll through the list of entries.

Press the **ESC** button to return to the previous menu.

2.4.1.6 Panel Levels

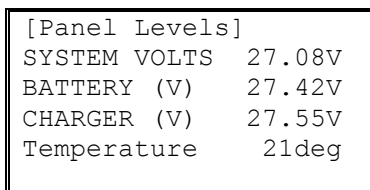


On selection, the display shows a list containing key information about power supply related levels.

Press the **↑↓** buttons to highlight the list of entries.

Press the **ESC** button to return to the previous menu.

System Volts relates to the supply voltage present on the main card all other values are measured at the power supply module. Where the communication link to the power supply module is broken the values are replaced by a '-' character.

2.4.2 Test

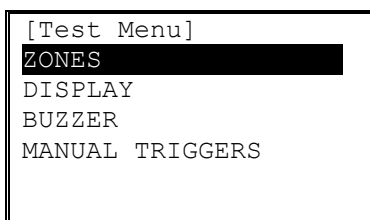

Press the **↑↓** buttons to scroll through the list and press the **✓** button to select the required test option.

2.4.2.1 Zones

The Test Zones function provides the means to implement a one-person walk test in order to test specific call points or detectors in one or more zones.

To test the detection zone circuits in accordance with the recommended weekly, monthly and annual test requirements, select the Test – Zones option. The devices connected to the circuit can then be tested without activating the extinguishing system and release.

Use the test key supplied for testing manual call points and either a heat source or smoke test aerosol for testing heat detectors / smoke detectors.

```
[Zone Test Select]
WITHOUT SOUNDERS
WITH SOUNDERS
```

On selection, the display prompts for whether the sounders / bells should ring for a short period (about 10 seconds) when the detection zone enters a test fire alarm condition.

Press the **↑↓** buttons to scroll through the list and press the **✓** button to select the required test option.

The display then shows a list of the detection zone circuits.

```
[Zone Test Select]
ZONE 1      TEST OFF
ZONE 2      TEST OFF
ZONE 3      TEST OFF
```

Press the **↑↓** buttons to scroll through the list and highlight the required zone circuit.

Press the **✓** button to select between TEST OFF and TEST ON.

To leave the Zone Test menu, press the **ESC** button. If there are still any zones in a test condition, the display will show the following options: -

```
[Zones in Test!]
CANCEL ALL TESTS
CONTINUE TESTS
```

Selecting the CANCEL ALL TESTS option will cancel all zone tests. The Test LED will then extinguish.

Alternatively, it is possible to leave the Zone Test Function with one or more Zones still in Test by selecting the CONTINUE TESTS option. This will enable the inspection or use of other menu functions and return the display to the normal operating mode. The Test LED will stay illuminated if this option is selected.

2.4.2.2 Display

The Test Display option checks the operation of all the Indicators and the Graphic Display. All of the Indicators are turned on and the entire display is shown in reverse.

```
LCD & KEY TEST
```

1

During this test, it is possible to test the operation of the

←,↑,↓,→,✓ and **0-9** buttons. When a button is pressed, it is indicated on the display. For example:

Press the **ESC** button to cancel the test and return to the previous menu.

2.4.2.3 Buzzer

On selection, the buzzer will sound for approximately 10 seconds.



ABOUT THIS PANEL

2.4.2.4 Manual Triggers³

On selection, the display shows:

```
Manual Trigger Test
MANUAL TRIGGER
OFF
```

Activate any manual trigger device (on the Rapid-Sense (TI-002341) Control Panel, on the TI-002444/TI-002445 Rapid-Sense Remote Status Indicator or other external manual trigger. The buzzer will sound and the display will change from **OFF** to **ACTIVE** to show the operation of the manual trigger.

Restore any manual trigger to normal (if required).

! When the display indicates OFF, press the **ESC** button to cancel the test and return to the previous menu.

2.4.3 Extinguishant Modes

```
[Mode Select]
MODE  MANUAL ONLY
EXTRACT  START?
```

Press the **↑↓** buttons to scroll through the list and highlight the required option.

2.4.3.1 Mode

The methods for initiating the release of extinguishant can be selected.

Press the **✓** button to select between MANUAL ONLY and AUTO + MANUAL.

In AUTO + MANUAL, the release of extinguishant can be established if either a manual release button is pressed or if the one or more of the detection zone circuits is activated due to detection of smoke.

RAPID-SENSE

Extinguishing Panel

SYSTEM NORMAL

22 AUG 2007 16:39:00

In MANUAL ONLY, the release of extinguishant can only be established if one of the manual release buttons is pressed.

RAPID-SENSE

Extinguishing Panel

SYSTEM NORMAL

(Manual Only Mode)

22 AUG 2007 16:39:00

NOTE: If a key-switch is provided on the front panel, or separately, for this function, then use the key-switch in preference to the menu option.

2.4.3.2 Extract

If the panel is configured and programmed to provide control of an extract fan then the operation of the extract fan can be manually controlled via the menu option.

The display is context sensitive and will present different options depending on whether the fan is on (running) or off.

If the fan is off, the display shows EXTRACT START? – Press the **✓** button to start the extract fan for the pre-programmed time.

If the fan is on, the display shows EXTRACT STOP? – Press the **✓** button to stop (turn off) the extract fan.

NOTE: If a key-switch is provided on the front panel, or separately, for this function, then use the key-switch in preference to the menu option.

³ Available from Software version 2.06

2.4.4 Disable / Enable

[Disabled List]

ZONE1	ENABLED
ZONE2	ENABLED
ZONE3	ENABLED
Man Release	ENABLED
Extinguish	ENABLED

Press the **↑↓** buttons to scroll through the list and highlight the required option.

Press the **✓** button to select between ENABLED and DISABLED conditions. If a circuit or function is disabled, then the General Disabled LED is illuminated along with any specific circuit / function disablement LED indicators.

The table below lists all of the items that can be disabled.

Item	Description	Comments
ZONE 1 ZONE 2 ZONE 3	Detection Zones, Zone 1, 2 and 3	Disables any fault reporting on these circuits. The zone will not enter the fire alarm condition even if there is smoke present.
Man Release	Manual Release of the extinguishant.	Prevents the release of extinguishant due to the activation of any manual release button.
Extinguish	The Output to activate the release of the extinguishant and Sounder Circuit 3 (Flooding zone sounders).	Disables any fault reporting on the extinguishing output circuit and flooding zone sounder circuit. Prevents the operation of the extinguishing output and flooding zone sounder circuit even if the release condition is established.
Sounder 1	General Fire Alarm Sounder Output (circuit 1).	Disables any fault reporting on the sounder-1 circuit. General fire alarm sounder circuit 1 will remain off irrespective of the operating condition of the panel.
Sounder 2	General Fire Alarm Sounder Output (circuit 2).	Disables any fault reporting on the sounder-2 circuit. General fire alarm sounder circuit 2 will remain off irrespective of the operating condition of the panel.
Fault Relay	The Fault Relay Output	Prevents the fault relay output from operating.
Fire Relay	The Fire Relay Output	Prevents the fire relay output from operating.
Prog Relays	All other relay control outputs	Prevents all other relay output circuits from operating.

2.4.5 Date/Time

[Set TIME/DATE]

TIME = 13:25
DATE = 29/09/07

Press the **↑↓** buttons to scroll through the list and highlight the required option.

Enter the required time or date using the number buttons. Enter all digits including zeros (i.e. 09 then 09 for 9:09 AM).

After all digits are entered, the time or date is set (if it is a valid time or date).



ABOUT THIS PANEL

This page is intentionally left blank

ABOUT THIS PANEL

This page is intentionally left blank





ABOUT THIS PANEL

Quick Reference Guide

RAPID-SENSE

Series


Extinguishing Panel

In the event of a fire alarm, call: -

TEL:

For Service & Maintenance,
contact: -

Controls and Indications

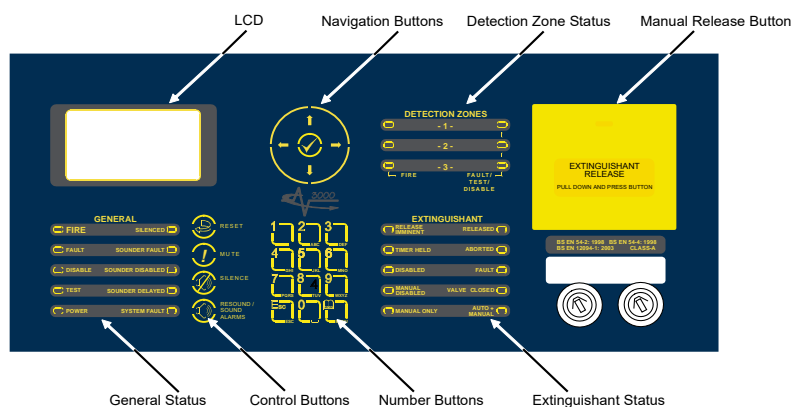

Navigation Buttons


- Press to scroll through Menu Options.
- Press to display more information.
- Press to scroll through menu Options.
- Press to scroll through lists of zones or devices.
- Press to confirm entry of numeric information entry.
- Press to confirm selection of a menu option.
- Press to change some of the configuration options.

Graphic Display

The graphical display provides detailed information of the source of fires, faults and warnings. It also shows menus for use when inspecting or programming the operation of the panel.


Under normal conditions the panel display shows the time, date and status: -

The display will automatically change to show detailed information on events and on the operating status condition of the panel.

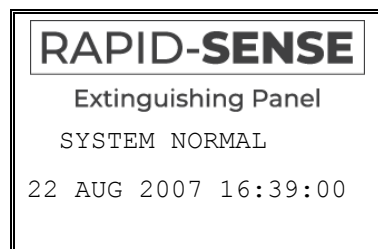

A typical Menu is shown

The main User functions are VIEW, TEST, DISABLE & ENABLE.

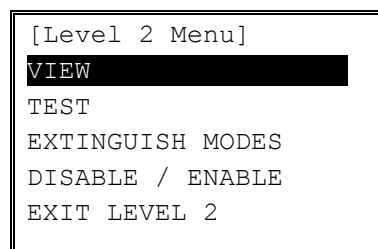

LED Status Indicators

The LED Status indicators are divided into three blocks of information:

GENERAL STATUS provides common information.

ZONE STATUS provides information on the detector circuits.

EXTINGUISHING STATUS provides specific information on the extinguishing controls

RED

YELLOW

GREEN

Separate LED Indicators show the presence of a fire alarm condition and the release status of the extinguishing controls.

Indicate other system operating conditions including Fault, Test and Disarmament conditions.

Indicates the presence of power to the system.

Number Buttons

- Used to enter numbers.
- Press to exit the menu functions and return to the normal display.
- Press to show or return to Menu Functions.

Control Buttons

- Reset**
Press to reset the panel from a fire alarm condition and/ or a gas release sequence.
- Mute**
Press to mute the internal buzzer.
- Silence**
Press to silence the sounders.
- Resound / Sound Alarms**
Press to re-activate the sounders.
Press to initiate a manual evacuation and sound the alarms.

Refer to the User Manual (Document Number TI-680-148) for full operating instructions.

ABOUT THIS PANEL



This page is intentionally left blank



ABOUT THIS PANEL

USER NOTES

Download the Ceasefire app.



Ceasefire Industries Private Limited,
Plot No. 4, Second Floor, Sector - 135,
Noida - Greater Noida Expressway,
Noida - 201 301, Uttar Pradesh (India)
t +91 120 4665800

Call our Free Hotline :
1800 120 3473 / +91 9540 666 666
or call +91 120 4223473

www.ceasefireworld.com

Follow us on:

